



Assembling the stays on the following models

SR-OVAL-VS
SR-ROUND-VH
SR-OVAL-VE
SR-OVAL-H

W. www.westradiators.co.uk T. 0845 358 1996

Parts List

1. Threaded Bung	2. M6 Stud	3. Main Stay Tube	4. Wall / Ceiling Plate	5. M6 Nut
				

Installation Instruction

Take the M6 stud (2.) and screw into the Threaded bung (1.) and slid inside the Main Stay Tube(3.)




Fit the Wall / Ceiling Plate (4.)



Ensure the M6 Stud protrudes through the Wall / Ceiling Plate far enough so that when the M6 nut (5.) is fitted the M6 Stud goes all the way through the M6 nut as well.



Now tighten the M6 Nut (finger tighten the nut then ¼ turn with the spanner.)

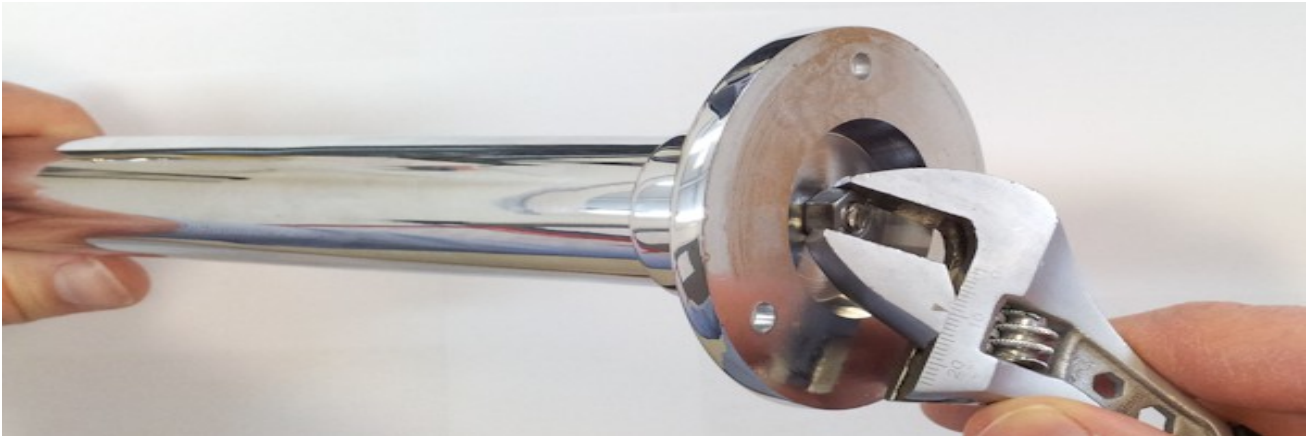

The stay is now ready to be fitted to the rail.



Now offer the rail up to the ceiling / wall and mark through the 3 hole on each wall/ceiling plate. Please ensure the orientation of the wall / ceiling plate is such that you can access the screw head to tighten this up with out the main rail interfering.

Please note we do NOT supply fixing screws due to the various make ups that walls & ceiling are constructed from (i.e stud work, block work, concrete). Each would require different fixing types. Appropriate fixing can be found at your local DIY store.

The stay can be cut down if require please see our:"Reducing the ceiling stay length on the following models" PDF